

Scanning Trigger Installation Diagram

SH42(T42 Scanning Trigger)(Adaptive model: EM-T42)



1. Install the Rugged Handheld on the Scanning Trigger.



2. Align the two holes on the top of the Scanning Trigger with the two holes beside the battery lock on the back of the Rugged Handheld.



3. Locking screw, installation completed.

SH52(T52 Scanning Trigger)(Adaptive model: EM-T52)



1. Install the Rugged Handheld on the Scanning Trigger.



2. Align the two holes on the top of the Scanning Trigger with the two holes beside the battery lock on the back of the Rugged Handheld.



3. Locking screw, installation completed.

SH62(62 Scanning Trigger)(Adaptive model: EM-T62/I62H/Q66)



1. Install the Rugged Handheld on the Scanning Trigger.



2. Align the two holes on the top of the Scanning Trigger with the two holes beside the battery lock on the back of the Rugged Handheld.



3. Locking screw, installation completed.

SH45(41, 51 Scanning Trigger) (Adaptive model: EM-T41/T51/Q41/Q51)



1. Fasten the Rugged Handheld on the Scanning Trigger tray in the direction shown in the figure.

2. The installation is complete.

SUH45(41, 51 UHF Handle) (Adaptive model: EM-T41/T51/Q41/Q51)



1. Fasten the UHF Handle on the Scanning Trigger tray in the direction shown in the figure.

2. The installation is complete.